

BRAUN

Series 5

590 cc
570 cc



Type 5751

counter. While doing so, the replacement light blinks and goes off when the reset is complete. The manual reset can be done at any time.

Accessories

Available at your dealer or Braun Service Centres:

- Shaver foil and cutter block: 51S
- Cleaning cartridge Clean&Renew: CCR

Environmental notice

This product contains rechargeable batteries. In the interest of protecting the environment, please do not dispose of the product in the household waste at the end of its useful life. Disposal can take place at a Braun Service Centre or at appropriate collection points provided in your country.



The cleaning cartridge can be disposed with regular household waste.

Subject to change without notice.

This product conforms to the European Directives EMC 2004/108/EC and Low Voltage 2006/95/EC.



For electric specifications, see printing on the special cord set.

Guarantee

We grant 1 year guarantee on the product commencing on the date of purchase. Within the guarantee period we will eliminate, free of charge, any defects in the appliance resulting from faults in materials or workmanship, either by repairing or replacing the complete appliance as we may choose.







This guarantee extends to every country where this appliance is supplied by Braun or its appointed distributor.

This guarantee does not cover: damage due to improper use, normal wear and tear (e.g. shaver foil or cutter block) as well as defects that have a negligible effect on the value or operation of the appliance. The guarantee becomes void if repairs are undertaken by unauthorised persons and if original Braun parts are not used.

To obtain service within the guarantee period, hand in or send the complete appliance with your sales receipt to an authorised Braun Customer Service Centre.

Braun GmbH
Frankfurter Straße 145
61476 Kronberg/Germany

98805740/IX-08
Korea/GB

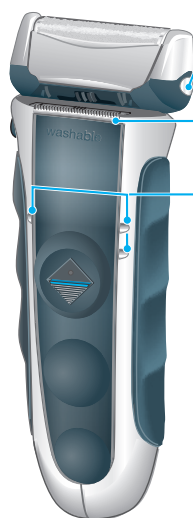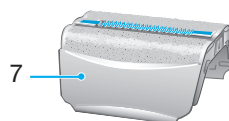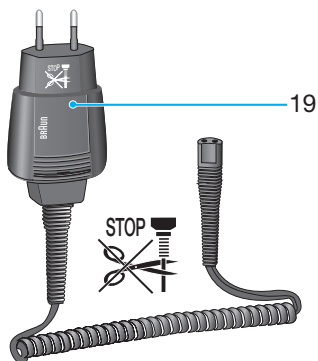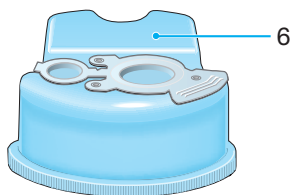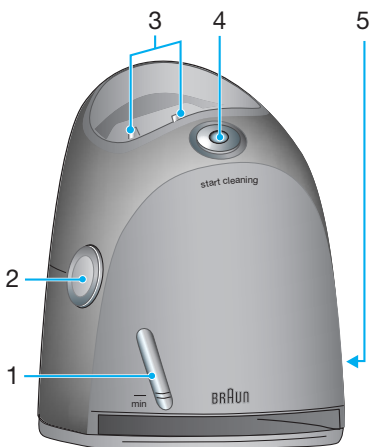


590


570




A

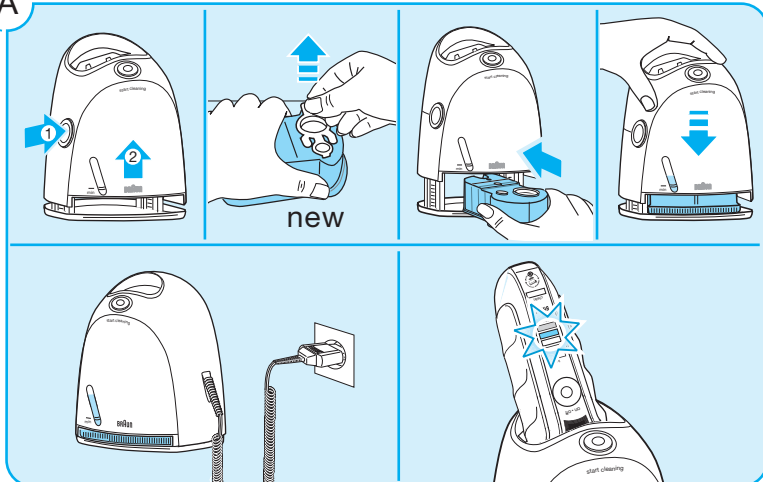


B

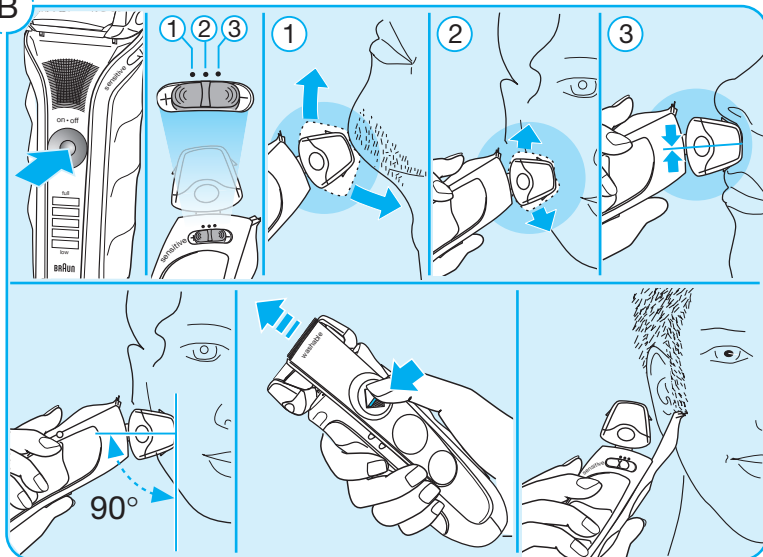

C

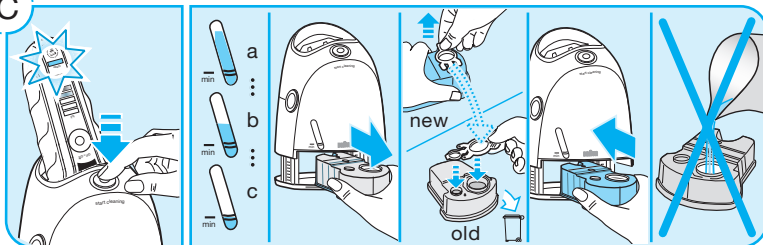

D

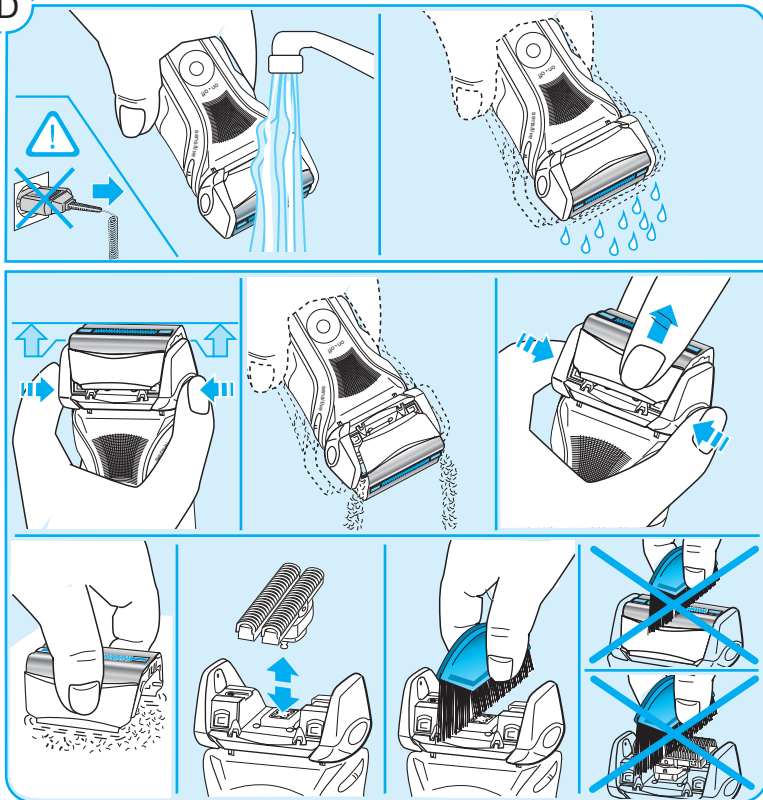

한국어

당사의 제품은 최고의 품질, 기능 및 디자인 표준에 맞도록 제작되었습니다. 브라운 면도기 신제품을 사용해 주셔서 감사합니다.

경고

면도기와 함께 안전 초저전압 전원이 장착된 특수 코드 세트가 제공됩니다. 부품을 교환하거나 개조하지 마십시오. 감전의 위험이 있습니다.

세정액이 새지 않도록 클린 앤 리뉴 (Clean&Renew) 스테이션을 평평한 바닥에 두십시오. 세정 카트리지가 설치되어 있는 경우 세정액이 카트리지를 밖으로 흐를 수 있으므로 스테이션을 기울이거나 갑자기 움직이거나 운반하지 마십시오. 스테이션을 욕실장 안에 두거나, 연마제 또는 래커 처리된 표면에 두지 마십시오.

세정 카트리지는 가연성이 높은 액체가 들어 있기 때문에 화기로부터 먼 곳에 두어야 합니다. 직사광선이나 담뱃불에 닿지 않도록 주의하고 라디에이터 위에 두지 마십시오. 어린이의 손이 닿지 않는 곳에 두십시오.

카트리지를 재생하여 사용하지 말고 정품 브라운 충전용 카트리지만 사용하십시오.

설명

클린 앤 리뉴™ 스테이션

- 1 잔량 표시기
- 2 카트리지 교체용 리프트 버튼
- 3 스테이션-면도기 연결 접촉부
- 4 시작 버튼
- 5 스테이션 전원 소켓
- 6 세정 카트리지

면도기

- 7 면도망
- 8 커터 블럭
- 9 면도망 분리 버튼
- 10 긴 수염 정리용 옆날

- 11 컴포트 설정 스위치 «sensitive»
- 12 면도기-스테이션 연결 접촉부
- 13 커짐/꺼짐 스위치
- 14 면도기 디스플레이
- 15 세정 표시등(노란색)
- 16 면도용 부품 교체 표시등
- 17 리셋 버튼
- 18 면도기 전원 소켓
- 19 특수 코드 세트
- 20 보관함

A 면도하기 전에

면도기를 처음 사용하기 전에 특수 코드 세트(19)를 사용하여 전기 콘센트에 연결해야 합니다. 또는 다음을 수행합니다.

클린 앤 리뉴 (Clean&Renew) 스테이션 설치

- 특수 코드 세트(19)를 사용하여 스테이션 전원 소켓(5)을 전기 콘센트에 연결합니다.
- 리프트 버튼(2)을 누르고 케이스를 엽니다.
- 세정 카트리지(6)를 평평한 면(예: 탁자)에 놓습니다.
- 카트리지에서 뚜껑을 조심스럽게 제거합니다.
- 스테이션 베이스에 카트리지를 끝까지 밀어 넣습니다.
- 잠길 때까지 케이스를 천천히 밀어 내려 닫습니다.

클린 앤 리뉴 (Clean&Renew)

스테이션에서 면도기 충전

면도기 헤드를 세정 스테이션 안쪽을 향해 아래로 밀어 넣습니다. (면도기 뒷면에 있는 접촉부(12)가 세정 스테이션에 있는 접촉부(3)에 정렬됨). 필요한 경우 클린 앤 리뉴 (Clean&Renew) 스테이션에서 면도기를 충전합니다.

완전히 충전하면 코드 연결 없이도 최대 45분까지 면도할 수 있습니다. 정확한 시간은 수염의 상태에 따라 달라질 수 있습니다. 최적의 충전을 위해 상온(5°C~35°C)에서 충전하십시오. 면도기를 50°C가 넘는 곳에 장시간 두지 마십시오.

면도기 디스플레이

면도기 디스플레이(14)에는 배터리의 충전 상태가 표시됩니다. 면도기가 충전중이거나 사용 중인 동안에는 해당 녹색 충전 표시등이 깜박입니다. 면도기가 클린 앤 리뉴 (Clean&Renew) 스테이션에 연결되어 있으면 완전히 충전되었을 때 모든 녹색 표시등에 1시간 가량 불이 들어옵니다.

면도기 전원이 켜져 있을 때 배터리 용량이 20% 아래로 떨어지면 적색 충전 용량 부족 표시등이 깜박입니다. 그러나 남은 용량으로 충분히 2~3회 정도 면도를 할 수 있습니다.

B 면도

켜짐/꺼짐 스위치(13)를 눌러 면도기를 작동합니다.

컴포트 설정 스위치 «sensitive» (11)
원하는 컴포트 옵션으로 면도기 헤드를 설정합니다.

«sensitive» 스위치(11)를 사용하면 세 가지 컴포트 옵션을 설정할 수 있습니다.

1 «+» :

면도기 헤드가 360도 회전하면서 피부의 면을 따라 자유롭게 움직이므로 더욱 편안하게 면도할 수 있습니다.

2 중간 위치:

더 효과적으로 제어할 수 있도록 면도기 헤드가 반고정 됩니다.

3 «-» :

달기 힘든 부위도 완전하게 제어하고 완벽하게 면도할 수 있도록 면도기 헤드가 고정됩니다.

긴 수염 정리용 옆날(10)

구레나룻, 콧수염 또는 턱수염을 정리하려면 긴 수염 정리용 옆날을 위쪽으로 움직이십시오.

완벽한 면도를 위한 팁

다음 3단계에 따라 간단하면서도 깔끔하게 면도할 수 있습니다.

1. 면도는 항상 세수하기 전에 하십시오.
2. 면도기는 항상 피부와 수직(90°)이 되어야 합니다.
3. 피부를 당겨 주면서, 수염과 반대 방향으로 면도하십시오.

코드가 연결된 상태에서 면도

면도기 전원이 소모(방전)된 경우에는 특수 코드 세트를 사용하여 전기 콘센트에 면도기를 연결한 상태로 수염을 깎을 수 있습니다.

세정

깔끔한 면도를 즐기고 싶으신 분은 면도가 끝날 때마다 스테이션에서 면도기를 세정해 주십시오. («자동 세정» 참조). 그러면 충전과 세정 모두 자동으로 해결됩니다.

세정 표시기

면도 후 노란색 세정 표시등(15)이 계속 켜져 있는 경우 반드시 클린 앤 리뉴 (Clean&Renew) 스테이션에서 면도기를 세정해 주십시오. 그렇지 않으면 일정 시간이 지난 후 세정 표시등이 꺼지며 카운터가 리셋됩니다.

C 자동 세정

클린 앤 리뉴 (Clean&Renew)는 면도기 세정, 충전 및 보관을 모두 해결합니다. 면도가 끝날 때마다 면도기를 클린 앤 리뉴 (Clean&Renew) 스테이션에 두고 다음을 수행하십시오.

- 면도기 헤드를 세정 스테이션 안쪽을 향해 아래로 넣습니다.
- 시작 버튼(4)을 누릅니다. 세정이 시작됩니다. (세정에 5분, 건조에 4시간 소요).
- 세정 프로세스를 도중에 중단하지 마십시오. 면도기가 젖어 있는 상태로 남아있게 되어 사용하기에 적절하지 않습니다.

불가피하게 중단해야 하는 경우 시작 버튼(4)을 누릅니다.

- 세정이 완료되면 노란색 세정 표시등이 꺼지며 먼도기를 사용할 수 있습니다.
- 세정 카트리지는 약 30회의 세정을 수행할 수 있습니다. 잔량 표시기(1)가 «min» 표시에 도달한 경우, 남은 세정액으로 약 5회 더 세정할 수 있습니다. 그런 다음 카트리지를 교체해야 합니다. 매일 사용할 경우 약 4주마다 교체해야 합니다.
- 위생 세정 카트리지는 알코올이 들어 있어, 두껍게 얼면 주변으로 조금씩 휘발되기 시작합니다. 카트리지를 매일 사용하는 경우가 아니라면 약 8주까지 사용한 후 교체하면 됩니다.
- 세정 카트리지는 윤활제도 들어 있기 때문에 세정이 끝난 후에 먼도망 프레임에 자국이 남을 수 있습니다. 하지만 이 자국은 천이나 부드러운 화장지로 살짝 닦아 주면 금방 없어집니다.

케이스 세정

가끔씩 젖은 천으로 먼도기와 클린 앤 리뉴 (Clean&Renew) 스테이션의 외장 케이스를 닦아 주고, 특히 안쪽의 먼도기 접촉 부위를 잘 닦아 주십시오.

세정 카트리지 교체

리프트 버튼 (2)을 눌러 케이스를 열고 사용하던 기존 카트리지에서 액체가 새지 않도록 몇 초 동안 기다렸다가 분리합니다. 사용한 카트리지는 오염된 세정액이 들어 있으므로, 사용하던 기존 카트리지를 폐기하기 전에 새 카트리지 뚜껑으로 열린 부분을 덮어 주어야 합니다.

D 수동 세정



먼도기 헤드는 흐르는 물에 세척하기 좋게 되어 있습니다.

경고: 먼도기 헤드를 물로 씻기 전에 반드시 전원을 끄셔야 합니다.

먼도기 헤드를 흐르는 물로 씻어주는 것도 청결을 유지하는 좋은 방법이며, 특히 여행할 때 유용합니다.

- 코드를 연결하지 않은 먼도기의 스위치를 켜고 흐르는 온수에 먼도기 헤드를 씻습니다. 연마제 성분이 들어 있지 않은 세제도 사용 가능합니다. 거품을 모두 씻어낸 다음 먼도기를 몇 초 동안 작동시킵니다.
- 그런 다음 먼도기 전원을 끄고 망 분리 버튼(9)을 눌러 먼도망(7) 및 커터 블록(8)을 분리합니다. 그런 다음 분리된 먼도 부품을 건조시킵니다.
- 먼도기를 정기적으로 물로 세척하는 경우에는 일주일에 한 번 묽은 기계용 기름 한 방울을 긴 수염 정리용 옆날과 먼도망에 떨어뜨려 주십시오.

다음과 같이 **빠른 세정** 방법을 사용할 수 있습니다.

- 망 분리 버튼(9)을 눌러 먼도망을 들어올립니다. 망을 완전히 분리하지는 마십시오. 먼도기 전원을 켜고 약 5-10초간 기다려 수염이 떨어지도록 합니다.
- 먼도기 전원을 끕니다. 먼도망을 분리하여 평평한 면에 놓습니다. 솔을 사용하여 먼도기 헤드의 안쪽 부분을 세정합니다. 그러나 먼도망이나 커터 블록을 솔로 세정하지 마십시오. 손상될 위험이 있습니다.

먼도기를 최상의 상태로 유지하는 방법

먼도망과 커터 블록 교체/리셋

먼도기의 성능을 완벽하게 유지하려면 교체 신호 표시등(16)이 켜지거나(약 18개월 후) 카세트가 노후 되었을 때 먼도망(7)과 커터 블록(8)을 교체합니다.

교체 표시등에서 이후 7회(먼도)에 걸쳐 먼도망 및 커터 블록 교체를 알립니다. 그런 다음 먼도기 디스플레이가 자동으로 리셋됩니다. 먼도망 및 커터 블록을 교체한 후 볼펜으로 리셋 버튼(17)을 3초 이상 누르면

카운터가 리셋됩니다. 그 동안 교체 표시등이 깜박이다가 리셋이 완료되면 꺼집니다. 수동 리셋은 언제든지 수행할 수 있습니다.

부속품

판매처나 브라운 서비스 센터 ((Braun Service Center))에서 구입할 수 있습니다.

- 면도망과 커터 블럭: 51S
- 세정 카트리지 클린 앤 리뉴 CCR

환경 관련 공지

이 제품에는 충전용 배터리가 들어 있습니다. 환경 보호를 위해, 수명이 다한 제품을 가정용 쓰레기로 배출하지 마십시오.

폐기 시에는 브라운 서비스 센터 (Braun Service Center) 또는 해당 지역의 충전지 폐기 지점에서 폐기하십시오.



세정 카트리지는 가정용 쓰레기로 배출할 수 있습니다.

이 문서의 내용은 예고 없이 변경될 수 있습니다.

이 제품은 European Directives EMC 204/108/EC 및 Low Voltage 2006/95/EC의 규정을 준수합니다.



전기 관련 규격은 특수 코드 세트에 인쇄된 사항을 참조하십시오.

품질 보증

- 본 제품은 **구입일로부터 1년간** 품질을 보증합니다.
- 1년간의 품질 보증기간 동안 제품 자체나 생산과정에서 비롯된 불량품은 상태에 따라 무료보수 또는 교환해 드립니다.
- 보증기간내이라도 소비자의 귀책사유에 의한 파손 (전압을 잘못 사용한 경우, 부적절한 전원 플러그에 연결한 경우, 사용 중 파손 등), 정상적인 마모, 사용에 지장이 없는 경미한 결함 등은 무상수리 또는 교환이 적용되지 않습니다.
- 브라운 서비스 센터가 아닌 다른 곳에서 수리를 하였거나 브라운 제품이 아닌 부품을 사용하였을 경우에는 품질보증 대상에서 제외됩니다. 그리고 본 제품의 구입자가 판매점에 의해 혹은 구입시의 영수증에 의해 확인되어야만 정상적인 품질 보증품으로 인정됩니다. **(구입시 영수증을 잘 보관하시어 애프터 서비스 시 불이익이 없도록 하십시오.)**
- 애프터 서비스를 받으셨더라도 원래의 품질보증기간이 연장되는 것은 아닙니다.

본 제품은 소비자분쟁해결기준에 따라 보상 받을 수 있습니다.
A/S 문의: 1588-1588
가까운 대우 일렉 서비스 센터에서 A/S를 받으실 수 있습니다.

브라운제품:

전국 유명 백화점, 할인점, 양판점 및 전자상가에서 구입할 수 있습니다.
http : //www.braun.com
http : //www.braun.co.kr

품질보증서		
본 제품을 구매한 유럽선(대우 일렉)에서 제조·수입한 제품입니다. 이래 기재된 내용으로 품질을 보증합니다.		
제 품 명	오 일 명	
구 입 일	보 증 기 간	구입일로부터 1년
고	방	
려	배	
	점	
한국 파견지 관에 (유) 서울특별시 강남구 테헤란로 411 B101F 105 전화 02-556-0000 FAX 02-556-0001		

English

Our products are designed to meet the highest standards of quality, functionality and design. We hope you enjoy your new Braun Shaver.

Warning

Your shaving system is provided with a special cord set, which has an integrated Safety Extra Low Voltage power supply. Do not exchange or tamper with any part of it, otherwise there is risk of an electric shock.

To prevent the cleaning fluid from leaking, ensure that the Clean&Renew station is placed on a flat surface. When a cleaning cartridge is installed, do not tip, move suddenly or transport the station in any way as cleaning fluid might spill out of the cartridge. Do not place the station inside a mirror cabinet, nor place it on a polished or lacquered surface.

The cleaning cartridge contains a highly flammable liquid so keep it away from sources of ignition. Do not expose to direct sunlight and cigarette smoking nor store it over a radiator.
Keep it out of reach of children.

Do not refill the cartridge and use only original Braun refill cartridges.

Description

Clean&Renew™ station

- 1 Level indicator
- 2 Lift button for cartridge exchange
- 3 Station-to-shaver contacts
- 4 Start button
- 5 Station power socket
- 6 Cleaning cartridge

Shaver

- 7 Shaver foil
- 8 Cutter block
- 9 Foil release buttons
- 10 Long hair trimmer

- 11 Comfort setting switch «sensitive»
- 12 Shaver-to-station contacts
- 13 On/off switch
- 14 Shaver display
- 15 Cleaning light (yellow)
- 16 Replacement light for shaving parts
- 17 Reset button
- 18 Shaver power socket
- 19 Special cord set
- 20 Etui

A Before shaving

Prior to first use, you have to connect the shaver to an electrical outlet using the special cord set (19) or alternatively, proceed as follows:

Installing the Clean&Renew station

- Using the special cord set (19), connect the station power socket (5) to an electrical outlet.
- Press the lift button (2) to open the housing
- Hold the cleaning cartridge (6) down on a flat, stable surface (e.g. table).
- Carefully remove the lid from the cartridge.
- Slide the cartridge into the base of the station as far as it will go.
- Slowly close the housing by pushing it down until it locks.

Charging the shaver in the Clean&Renew station

Insert the shaver head down into the cleaning station. (The contacts (12) on the back of the shaver will align with the contacts (3) in the cleaning station).

If required, the Clean&Renew station will start charging the shaver now.

A full charge provides up to 45 minutes of cordless shaving time. This may vary according to your beard growth.

The best environmental temperature for charging is between 5 °C to 35 °C. Do not expose the shaver to temperatures higher than 50 °C for extended periods of time.

Shaver display

The shaver display (14) shows the charge status of the battery. During charging or when using the shaver, the respective green battery segment will blink. When fully charged, all green segments will light up for approximately one hour, provided the shaver sits in the C&R station.

The red low charge segment flashes when the battery capacity has dropped below 20 %, provided the shaver is switched on. The remaining capacity will then be sufficient for 2 to 3 shaves.

B Shaving

Press the on/off switch (13) to operate the shaver.

Comfort setting switch «sensitive»

Setting the shaver head according to your comfort needs.

The «sensitive» switch (11) provides three options for comfort setting:

- ① «+»:
The shaver head is in full swing, freely follows the contours of your skin to provide more comfort.
- ② middle position:
The shaver head is semi-fixed for more control.
- ③ «-»:
The shaver head is fixed for full control and precise handling in hard to reach areas.

Long hair trimmer

To trim sideburns, moustache or beard, slide the long hair trimmer (10) upwards.

Tips for the perfect shave

- For best results, Braun recommends you follow 3 simple steps:
1. Always shave before washing your face.
 2. At all times, hold the shaver at right angles (90°) to your skin.
 3. Stretch your skin and shave against the direction of your beard growth.

Shaving with the cord

If the shaver has run out of power (discharged), you may also shave with the shaver connected to an electrical outlet via the special cord set.

Cleaning

For best shaving results, we recommend cleaning the shaver in the station after each shave (see «Automatic cleaning»). All charging and cleaning needs are then automatically taken care of.

Cleaning indicator

Clean your shaver in the Clean&Renew station at the latest when the yellow cleaning light (15) shines constantly after shaving. If this is not done, the cleaning light will go off after some time and the counter will be reset.

C Automatic cleaning

The Clean&Renew has been developed for cleaning, charging and storing your shaver. After each shave, return the shaver to the Clean&Renew station and proceed as follows:

- Insert the shaver head down into the cleaning station.
- Push down the start button (4). The cleaning process will start (approx. 5 minutes cleaning, 4 hours drying).
- Do not interrupt the cleaning process, as it leaves the shaver wet and not fit for use.

If interruption is needed nonetheless, press the start button (4).

- When cleaning is finished, the yellow cleaning light will go off and the shaver is ready for use.
- A cleaning cartridge should be sufficient for about 30 cleaning cycles. When the level indicator (1) has reached the «min» mark, the remaining fluid in the cartridge is sufficient for about 5 more cycles. Then the cartridge should be replaced, when used daily approx. every 4 weeks.
- The hygienic cleaning cartridge contains alcohol, which once opened will naturally evaporate slowly into the surrounding air. Each cartridge, if not daily used, should be replaced after approximately 8 weeks.
- The cleaning cartridge also contains lubricates, which may leave residual marks on the shaver head after cleaning. However, these marks can be removed easily by wiping gently with a cloth or soft tissue paper.

Cleaning the housing

From time to time clean the housing of the shaver and the Clean&Renew station with a damp cloth, especially inside the cleaning chamber where the shaver rests.

Replacing the cleaning cartridge

After having pressed the lift button (2) to open the housing, wait for a few seconds before removing the used cartridge to avoid any dripping.

Before discarding the used cartridge, make sure to close the openings using the lid of the new cartridge, since the used cartridge will contain contaminated cleaning solution.

D Manual cleaning



The shaver head is suitable for cleaning under running tap water. Warning: Detach the shaver from the power supply before cleaning the shaver head in water.

Rinsing the shaver head under running water is an alternative way to keep the shaver clean, especially when traveling:

- Switch the shaver on (cordless) and rinse the shaver head under hot running water. You may use liquid soap without abrasive substances. Rinse off all foam and let the shaver run for a few more seconds.
- Next, switch off the shaver, press the foil release buttons (9) to remove the shaver foil (7) and cutter block (8). Then leave the disassembled shaving parts to dry.
- If you regularly clean the shaver under water, then once a week apply a drop of light machine oil onto the long hair trimmer and shaver foil.

The following quick cleaning is another alternative cleaning method:

- Press the foil release buttons (9) to lift the shaver foil (do not remove the foil completely). Switch on the shaver for approx. 5–10 seconds so that the shaved stubbles can fall out.
- Switch off the shaver. Remove the shaver foil and tap it out on a flat surface. Using the brush, clean the inner area of the shaver head. However, do not clean the shaver foil nor the cutter block with the brush as this will damage them.

Keeping your shaver in top shape

Replacing the foil and cutter block/reset

To maintain 100% shaving performance, replace the shaver foil (7) and cutter block (8), when the replacement symbol (16) lights up (after about 18 months) or when cassette is worn.

The replacement symbol will remind you during the next 7 shaves to replace the shaver foil and cutter block. Then the shaver will automatically reset the display. After you have replaced the shaver foil and cutter block, use a ball-pen to push the reset button (17) for at least 3 seconds to reset the